

INSTALLATION AND USE FOR GUN AND FILE CABINETS

1 - Installation

ATTENTION: for your safety, the cabinet must be fixed to the wall by the means of dowels (not supplied) through the holes on the rear of the case. Before installing a cabinet, it is suggested to check the correct functioning of each of its parts (see points 2-10): at purchase the gun cabinet is locked. In case of mechanical cabinet open it using the key or, in case of electronic cabinet, using the emergency key. **Note: for cleaning the wood finish cabinets please wipe with wet cloth only.**

2 - Application of the barrel support

Remove the sticker or stickers protection film (depending on the model) from the barrel support and fix it to the case at about 95 cm height from the bottom (see fig. 1a). Position of the barrel support suitable only for 4430 and 4430.L item as shown in fig. 1b.

3 - Assembly instructions for insides shelves (for file cabinets only - see fig. 2)

1. Place the side wall **A** with 8 mm. hole inside the cabinet, in contact with right wall.
2. Place the side wall **B** inside the cabinet in contact with left wall.
3. Fix shelves **C** on side walls by using relevant hooks. **Note: maximum capacity for each shelf is 15 kg.**

4 - Assembly instructions for insides shelves, barrel support and gun-butt base (for modular cabinets only - see fig. 3)

1. Place the side wall **A** inside the cabinet in contact with left wall.
2. Fix shelves **B** on side walls by using relevant hooks. **Note: maximum capacity for each shelf is 15 kg.**
3. Remove the stickers protection film from the gun butt base **C** and fix it to the base.
4. Remove the sticker protection film from the barrel support and fix it to the case at about 95 cm height from the bottom (see fig. 1a).

5 - First opening / Opening with emergency key (only for electronic cabinets)

The mechanical emergency key is contained in a sealed envelope inside the package and is used for the first opening of an electronic cabinet or further openings in case of electronic card damage, lack of power supply (batteries over), or when opening code is forgotten. To open a cabinet with emergency key is necessary to:



1. Remove the plastic top upward the keypad in order to access the key hub (see fig. 4).
2. Insert the key and turn it clockwise till it stops.
3. Turn the knob clockwise while keeping the key firm.

Once the door is opened, remove the key and put back the key hub top. **Keep the present instructions and the emergency key in a secured place but never inside the cabinet itself!**

6 - Insert / Replacing batteries (only for electronic cabinets)

1. Open the cabinet and take the battery case out of its housing by simply removing the plastic top that covers it (see fig. 1a).
2. Remove the battery case.
3. Remove the batteries (in case of replacement).
4. Insert new batteries **paying attention to the polarity** indicated on the battery case.
5. To check whether the safe works press any key: the "OK" green LED must blink slightly.
6. Place the battery case back into its housing and put back its cover.

ATTENTION: use only AA LR6 type 1,5V alkaline batteries. All 4 batteries of the same safe must be replaced at once. Do not use together new and old batteries or batteries of a different type and quality. **When the batteries are almost empty any pressed key will make the "BATTERY" red LED blink: replace then the batteries. N.B. : the electronic card has a non volatile memory so the memorized codes are not erased when power supply is removed.**

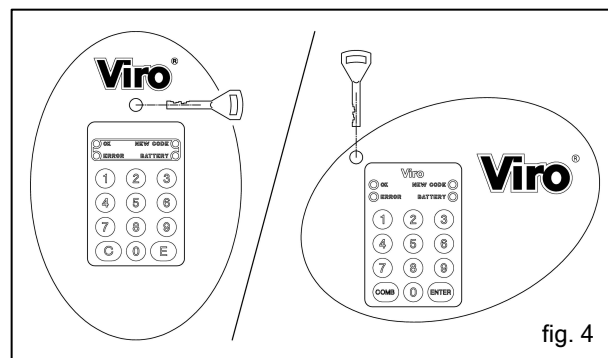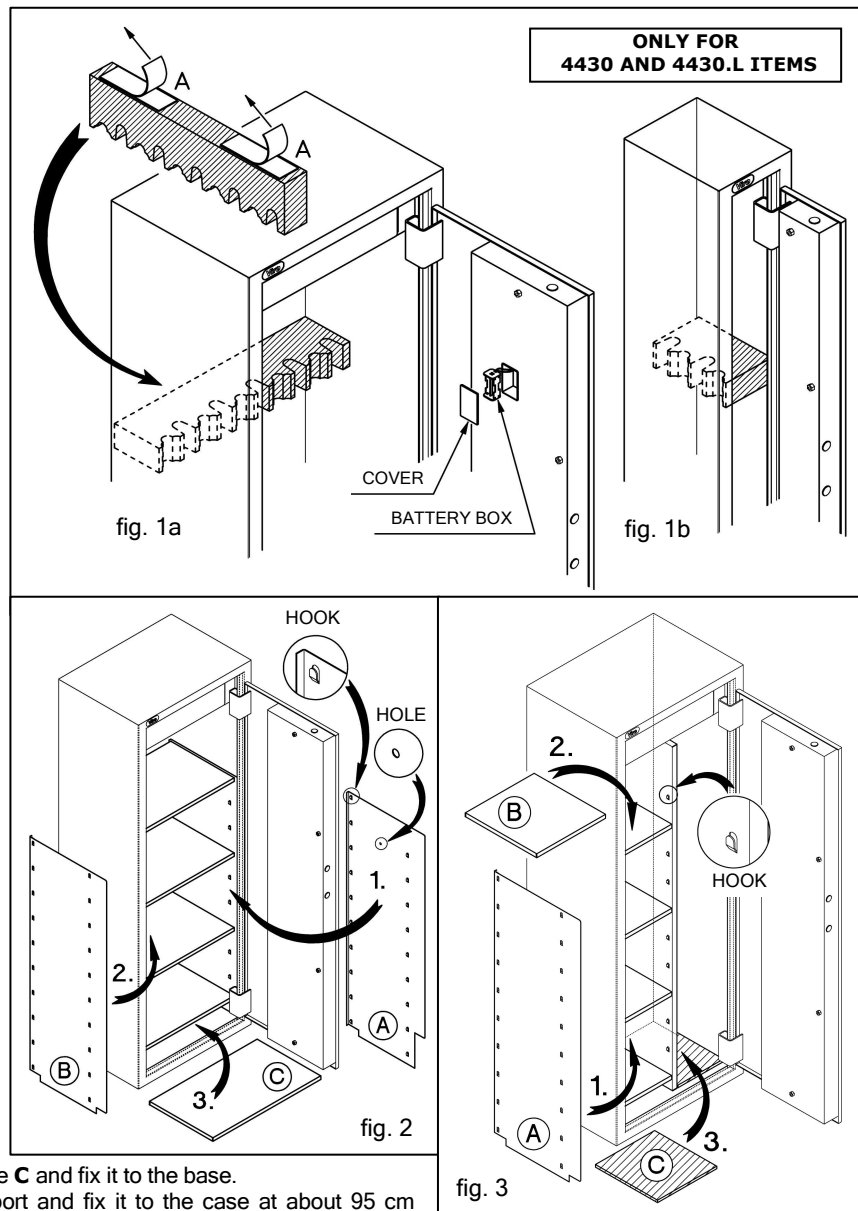

7 - Code setting (min. 3 - max. 8 digits; only for electronic cabinets)

1. **With door opened** (retracted lock-bolts) press "C" or "COMB" (according to the model) key on the keypad until "NEW CODE" green LED lights up.
2. Within 10 sec enter a personal code of min. 3 - max. 8 digits. (N.B.: if within 10 sec no code is entered, restart from point 1).
3. Press "ENTER" or "E" (according to the model). A beep will confirm that the code is memorized. **Do not forget your personal code. Before closing the cabinet door it is very important to check whether the code is set correctly by following the instructions described at point 8.**

8 - Code check (only for electronic cabinets)

1. **With door opened** (retracted lock-bolts) turn the knob counterclockwise, as for closing the cabinet, making sure the lockbolts are completely out of their housings.
2. Enter your opening code.
3. Press "ENTER" or "E" (according to the model).
4. Turn the knob clockwise within 4 seconds. If the lock-bolts do not enter back into their housings there is an error in the code setting. To correct an error use the emergency key (see paragraph 5), turn the knob counter clockwise and repeat the procedure of code setting described at paragraph 7.

ATTENTION: Viro is not responsible for any inconvenience caused by an erroneous code setting or if code is forgotten.

9 - Closing (only for electronic cabinets)

1. Close the door manually.
2. Turn the knob counter clockwise.

10 - Opening (only for electronic cabinets)


1. Enter the set opening code.
2. Press "ENTER" or "E" (according to the model).
3. Turn the knob clockwise within 4 sec.

11 - How to replace the cylinder (only for cabinets with security escutcheon)

1. **With door opened** turn the key anticlockwise making lock-bolts come completely out and remove the key.
2. Unscrew **A** screws with a cross-tip screwdriver and take out the security escutcheon **B**.
3. Insert the key directly into the cylinder and unscrew **C** screw with a screwdriver placed inside the door beneath the lock-bolts.
4. Turn the key slightly and pull the cylinder until it can be unlocked and therefore removed.
5. Replace with a new cylinder complete with key. Then turn the key gently while pressing the cylinder up to the end.
6. Screw the screw **C** with a screwdriver.
7. To check if cylinder works correctly, **open the door** and turn the key clockwise and anticlockwise to make lock-bolts come in and out.

ATTENTION: possible problems in the key rotation are due to an incorrect alignment of the cylinder into its housing. To solve them, it would be necessary to unscrew the screw C and put the cylinder in a correct position.

8. Remove the key and put the security escutcheon back into the cylinder. N.B.: movable ring **D** should be positioned as for fig. 5
9. Screw all **A** screws while keeping security escutcheon blocked in its position
10. To check if cylinder works correctly, **open the door** and check if it turns without encountering frictions. **ATTENTION: possible problems in the key rotation are due to an incorrect alignment of the security escutcheon. To solve them, it would be necessary to unscrew all A screws and to refit them into the correct position.**

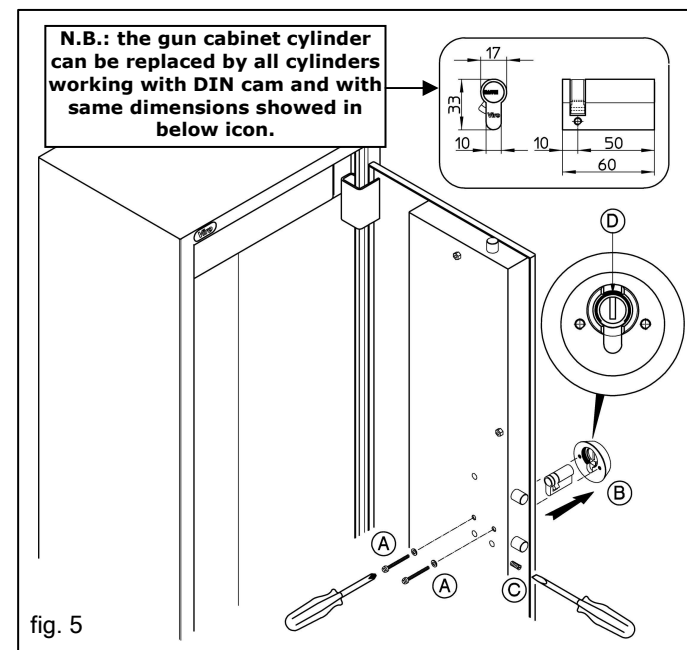

Warranty conditions and contents

All Viro products undergo the most stringent testing and therefore guarantee reliability. Viro SpA reserves the right to introduce modifications or improvements to its products, which may deem desirable without obligating itself to install such improvements to its previously manufactured safes. Viro SpA guarantee their products to be free from defects in material and manufacturing for the period provided for by effective law on purchasing time (Decr. Leg. 2/02/02 n.24 that puts into effect Directive No 1099/44/CE) and will replace or repair at no charge all component parts of the product under warranty - after consultation with our technical department or an authorised Service Centre - should they be defective due to a manufacturing or material flaw. The warranty covers the replacement of the components, ex-works, if defective, but does not include the safe opening costs, the removing costs and the final replacement, or any other cost or damage, even though related to the defective product. The property damage responsibility of Viro SpA will be in no case higher than the selling price of the article itself, even if the damage - including the content of the safe - is due to forcing, theft or burglary. The warranty shall not apply to any Viro component part which has been subject to misuse, neglect, incorrect installation of maintenance, or to a use in contravention of instructions furnished by the Company. The warranty does not extend to safes which have been installed in unsuitable environments or which have been repaired by unauthorised personnel or suffered damage in transit, or to any other circumstance not ascribable to faults in manufacture. Viro SpA shall not be liable for any direct, indirect and consequential damage and/or injury arising from the malfunctioning of their product or from the safes, or if caused by negligence or by lack of compliance with the instructions manual. The warranty shall take effect from the date of purchase. Sales receipt (fiscal receipt, cash-desk receipt, invoice, delivery note or the like) validates the date of purchase, irrespective of the actual fitting date. Failing a sales receipt, the warranty shall be calculated from the date of manufacture of the product, which shall be determined from its serial number. In case of purchasing of safe/cabinet supplied complete with external contacts for the emergency opening (without mechanical emergency opening), should the safe not be open due to its block or malfunctioning, Viro S.p.A. is free from any responsibility for damages caused to things or persons, even if connected or depending to the malfunctioning, including the content of the safe. The Seller is completely excluded from any costs and charges for forced opening of the safes/cabinets, their removal and further new installation of the product and the restoration of the places conditions.

Viro S.p.A. Via Garibaldi n.4 - 40069 Zola Predosa (BO) Italy - www.viro.it - E-mail: viro@viro.it
Tel. +39 051 6176511 - Fax +39 051 755079 (Sales Department) - Fax +39 051 6176627 (After-Sales Support)